


PA-01 Control Panel User Instruction

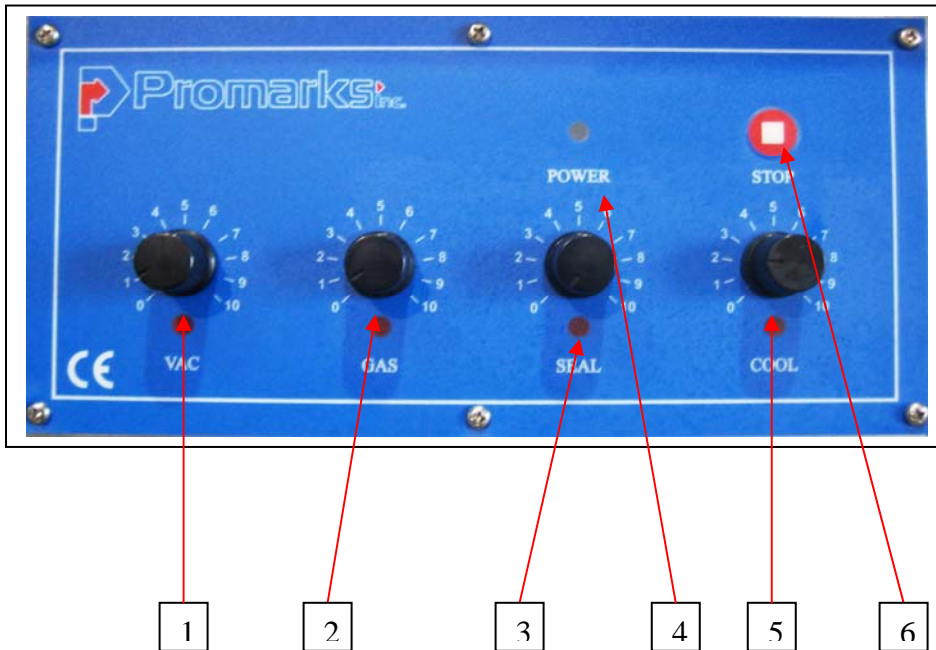

The desired number set on the panel is a time based setting. Each function should be tested for proper results. Note - the numbers do not equate to seconds. The numbers are a “0 – 10” reference.

Functions -

1. Vacuum Control - Set number to desired vacuum time. 0 to 10
2. Gas Flush Control - Set number to desired gas amount. Set to “0” if no gas flush is needed.
3. Sealing Control - Set number for desired seal time. Do not exceed “3” on first test.
4. Power Indicating Light
5. Cooling Control - This is a dwell or delay before the vent function. Minimum setting is “3”
6. Emergency Stop (When you press this button, the cycle will be terminated and will advance to the vent function.)